




IMPRESSA F7 – Quick Reference Guide

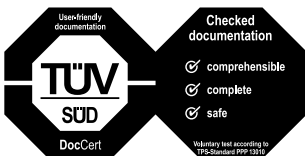

The 'IMPRESSA F7 Instructions for Use' together with these short instructions 'IMPRESSA F7 – Quick Reference Guide' has been awarded the seal of approval by the independent German Technical Inspection Agency, TÜV SÜD, due to its easy-to-understand style, its thoroughness and coverage of safety aspects.

IMPRESSA F7 – Quick Reference Guide







These short instructions do not replace the ‘IMPRESSA F7 Instructions for Use’. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Rinsing the machine

You can initiate the rinse operation manually at any time.

Precondition: **READY** is displayed.

- ▶ Place a receptacle under the coffee spout.
-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
-  ▶ Press the Rotary Switch to enter the programme item.
C CLEANING
-  ▶ Turn the Rotary Switch until **RINSE** is displayed.
-  ▶ Press the Rotary Switch to initiate the rinse operation.

RINSING, water flows out of the coffee spout.

The rinse stops automatically. **READY** appears on the display.








Rinsing the fine foam frother

i This chapter applies to the **professional fine foam frother** and the **fine foam frother**.

After each milk preparation, the IMPRESSA prompts you to perform a cappuccino rinse.

Precondition: **RINSE CAPPUCCINO** is displayed and the Maintenance button  lights up.

- ▶ Place a receptacle under the fine foam frother.
-  ▶ Press the Maintenance button.
SWITCH OPEN
The arrow on the switch lights up.
-  ▶ Turn the switch to the  position.
CAPPUCCINO RINSING, the fine foam frother is rinsed.
The rinse stops automatically. **SWITCH CLOSE** appears on the display.
-  ▶ Turn the switch to the  position.
The illuminated arrow on the switch goes out. **READY** appears on the display.



Cleaning the fine foam frother

i This chapter applies to the **professional fine foam frother** and the **fine foam frother**.









To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk. Your IMPRESSA will **not** prompt you to clean the fine foam frother.

CAUTION If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.



- ▶ Use only original JURA maintenance products.

i JURA Cappuccino Cleaner is available from specialised dealers.

Precondition: **READY** is displayed.


-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
-  ▶ Press the Rotary Switch to enter the programme item.
C CLEANING
-  ▶ Press the Rotary Switch.
CLEANER FOR CAPPU.
 - ▶ Remove the milk pipe from the milk container or carton.
 - ▶ Pour 250 ml of fresh water into a receptacle and add one capful of Cappuccino Cleaner.
 - ▶ Immerse the milk pipe in the receptacle.
 - ▶ Place a receptacle under the fine foam frother.
-  ▶ Press the Rotary Switch.
HEATING / STEAM
As soon as the machine has heated up, **SWITCH OPEN** appears.
The arrow on the switch lights up.
-  ▶ Turn the switch to the  position.
CAPPUCCINO CLEANING, the fine foam frother and the milk pipe are cleaned.
SWITCH CLOSE
-  ▶ Turn the switch to the  position.
WATER FOR CAPPUCCINO
 - ▶ Rinse the receptacle thoroughly, fill it with 250 ml of fresh water and immerse the milk pipe in the water.
 - ▶ Empty the other receptacle and place it under the fine foam frother once more.



- ▶ Turn the switch to the  position.
CAPPUCCINO CLEANING, the fine foam frother and the milk pipe are rinsed with fresh water.
SWITCH CLOSE
- ▶ Turn the switch to the  position.
The illuminated arrow on the switch goes out. **READY** appears on the display.

Dismantling and rinsing the fine foam frother

To make sure the fine foam frother works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk. Your IMPRESSA will not prompt you to dismantle and rinse the frother.

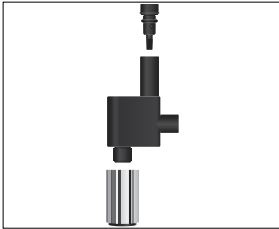

- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Carefully remove the fine foam frother from the Connector System[®] by twisting slightly.
- ▶ Dismantle the fine foam frother into its individual parts.
- ▶ Rinse all the parts of the fine foam frother thoroughly under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in JURA Cappuccino Cleaner and then rinse them thoroughly.
- ▶ Re-assemble the fine foam frother.


i Ensure that all individual parts are correctly and firmly connected to ensure optimum operation.

- ▶ Firmly attach the fine foam frother to the Connector System[®].

Dismantling and rinsing the professional fine foam frother

To make sure the professional fine foam frother works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk. Your IMPRESSA will not prompt you to dismantle and rinse the frother.

- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Carefully remove the professional fine foam frother from the Connector System[®] by twisting slightly.

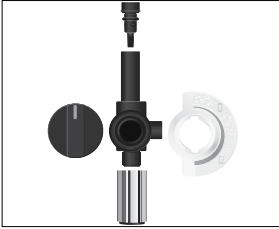

- ▶ Dismantle the professional fine foam frother into its individual parts.
- ▶ Rinse all the parts of the professional fine foam frother thoroughly under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in JURA Cappuccino Cleaner and then rinse them thoroughly.
- ▶ Re-assemble the professional fine foam frother.






- i** Ensure that all individual parts are correctly and firmly connected to ensure optimum operation.
- ▶ Firmly attach the professional fine foam frother to the Connector System®.

Inserting and activating the filter

Your IMPRESSA no longer has to be descaled if you are using the CLARIS Blue filter cartridge. If you did not activate the filter cartridge the first time you used the machine, you can do this now as follows.

- i** Perform the ‘inserting the filter’ operation without any interruptions. This will ensure that your IMPRESSA always produces its best.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
-  ▶ Turn the Rotary Switch until **FILTER –** is displayed.
-  ▶ Press the Rotary Switch to enter the programme item.
NO
-  ▶ Turn the Rotary Switch until **YES** is displayed.
-  ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display.
FILTER INSERT
- ▶ Remove and empty the water tank.
- ▶ Open the filter holder.
- ▶ Remove the CLARIS Blue filter cartridge from the Welcome Pack.



- ▶ Insert the CLARIS Blue filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.

i After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Place a receptacle (at least 300 ml) under the fine foam frother.




- ▶ Press the Rotary Switch.

SWITCH OPEN

The arrow on the switch lights up.



- ▶ Turn the switch to the  position.


FILTER RINSING, water flows out of the fine foam frother.

i You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.

i The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 300 ml. **SWITCH CLOSE** appears on the display.



- ▶ Turn the switch to the  position.

The illuminated arrow on the switch goes out.

HEATING, the machine heats up.

READY appears on the display. The filter is now activated.

Changing the filter

i After 50 litres of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.

i After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.

i If the CLARIS Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.

i CLARIS filter cartridges are available from specialised dealers.




Precondition: **READY / FILTER** is displayed and the Maintenance button  lights up.

-  ▶ Press the Maintenance button.

FILTER CHANGE

- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the old CLARIS Blue filter cartridge.
- ▶ Insert a new CLARIS Blue filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.





- ▶ Place a receptacle (at least 300 ml) under the fine foam frother.
-  ▶ Press the Rotary Switch.
SWITCH OPEN
The arrow on the switch lights up.
-  ▶ Turn the switch to the  position.
FILTER RINSING, water flows out of the fine foam frother.

i You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.

i The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 300 ml. **SWITCH CLOSE** appears on the display.

-  ▶ Turn the switch to the  position.
The illuminated arrow on the switch goes out.
HEATING, the machine heats up.
READY appears on the display.

Cleaning the machine


After 200 preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

Precondition: **READY / CLEAN** is displayed and the Maintenance button  lights up.

-  ▶ Press the Maintenance button.

EMPTY TRAY

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

PRESS RINSE, the Maintenance button  lights up.

- ▶ Place a receptacle under the coffee spout.

-  ▶ Press the Maintenance button.

CLEANING, water flows out of the coffee spout.

The operation is interrupted, **ADD TABLET**.

- ▶ Open the cover of the filler funnel for ground coffee.



- ▶ Insert a JURA cleaning tablet into the filler funnel.

- ▶ Close the cover of the filler funnel.

PRESS RINSE, the Maintenance button  lights up.

-  ▶ Press the Maintenance button.

CLEANING, water flows out of the coffee spout several times.

The operation stops automatically.

EMPTY TRAY

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

HEATING

READY appears on the display. Cleaning is now complete.

Your IMPRESSA is once more ready for use.

Descaling the machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

⚠ CAUTION If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
- ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.

CAUTION If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

CAUTION If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling programme to run to the end.

CAUTION If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.

- ▶ Clean up any splashes immediately.

i The descaling programme lasts approximately 45 minutes.

i JURA descaling tablets are available from specialised dealers.

i If you use a CLARIS Blue filter cartridge and this is activated, you will not be prompted to descale.

Precondition: **READY / DESCALE** is displayed and the Maintenance button **⚠** lights up.


- ⚠** ▶ Press the Maintenance button.

EMPTY TRAY


- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

AGENT IN TANK

- ▶ Remove and empty the water tank.

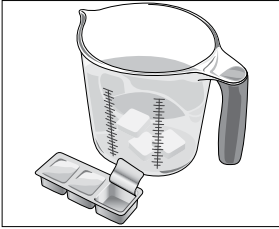

- ▶ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a receptacle holding 500 ml of water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it into the machine.
SWITCH OPEN
The arrow on the switch lights up.
- ▶ Carefully remove the fine foam frother from the Connector System® by twisting slightly.
- ▶ Place a receptacle (at least 500 ml) under the Connector System®.
- ▶ Turn the switch to the \Downarrow position.
DESCALING, water flows out of the Connector System® several times. The Maintenance button \clubsuit flashes during the descaling operation.
The operation is interrupted, **SWITCH CLOSE**.
- ▶ Turn the switch to the $\textcircled{1}$ position.
DESCALING, the descaling operation is continued. The Maintenance button \clubsuit flashes during the descaling operation.
The operation is interrupted, **EMPTY TRAY**.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
FILL WATER TANK
- ▶ Empty the receptacle and place it under the Connector System® and the coffee spout.
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
SWITCH OPEN
The arrow on the switch lights up.
- ▶ Turn the switch to the \Downarrow position.
DESCALING, the descaling operation is continued. The Maintenance button \clubsuit flashes during the descaling operation.
The operation is interrupted, **SWITCH CLOSE**.

- ▶ Turn the switch to the **I** position.
DESCALING, the descaling operation is continued. The Maintenance button  flashes during the descaling operation.
The operation is interrupted, **DESCALING**.
Water flows out of the coffee spout.
EMPTY TRAY
 - ▶ Re-assemble the fine foam frother.
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
READY appears on the display. Descaling is now complete.
Your IMPRESSA is once more ready for use.
- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.